

## Sky Share S10 Compatibility List

**Note:** For the best compatibility, please use the exclusive SP Sky Share microSD card (which comes with the package). There is no guarantee of full compatibility with other microSD cards.

For SDXC/UHS-1 supported digital cameras, please use the exclusive SP Sky Share microSD card for the best compatibility. Should there be any necessity of microSD card replacement, please make sure they are SDHC microSD (SD2.0) cards.

**Note:** For the best compatibility, we recommend our Silicon Power's card readers.

**Note:** For Panasonic models, please check the individual table on the bottom for the detail.

Brand	Model	Comment
Sony	A77	
Sony	HX200V	
Sony	RX100	
Sony	W380	
Sony	A99	
Sony	NEX-5	
Sony	NEX-5R	
Sony	NEX-6	
Sony	NEX-C3	
Sony	NEX-F3	
Sony	A57	
Sony	A65	
Sony	NEX-7	
Sony	NEX-3N	
Olympus	E-5	
Olympus	E-P3	
Olympus	E-PL2	
Olympus	SH-25MR	
Olympus	SP-810UZ	
Olympus	TOUGH TG-1	
Olympus	TOUGH TG-2	
Olympus	TOUGH TG-610	
Olympus	TOUGH TG-810	
Olympus	VG-170	
Olympus	E-PL5	
Olympus	E-PM2	
Olympus	XZ-2	
Olympus	X2-1	

Nikon	Coolpix A
Nikon	Coolpix AW100
Nikon	Coolpix L25
Nikon	Coolpix L810
Nikon	Coolpix P500
Nikon	Coolpix P7000
Nikon	Coolpix P7700
Nikon	Coolpix S1100PJ
Nikon	Coolpix S30
Nikon	Coolpix S4000
Nikon	Coolpix S4300
Nikon	Coolpix S8000
Nikon	Coolpix S8200
Nikon	Coolpix S9100
Nikon	Coolpix S9200
Nikon	Coolpix S9300
Nikon	J1
Nikon	J2
Nikon	J3
Nikon	V1
Nikon	V2
Nikon	P310
Nikon	D600
Nikon	D800
Nikon	D3200
Nikon	D5200
Nikon	D7000
Nikon	P510
Nikon	P7100
Fujifilm	S10
Fujifilm	AV130
Fujifilm	AV200
Fujifilm	F500EXR
Fujifilm	F770EXR
Fujifilm	F80EXR
Fujifilm	HS10
Fujifilm	HS20EXR
Fujifilm	HS25EXR
Fujifilm	HS50EXR
Fujifilm	S2800HD
Fujifilm	SL300
Fujifilm	X100/X100S

Fujifilm	XP10/XP11
Fujifilm	XP50
Fujifilm	Z700EXR
Fujifilm	Z900EXR
Fujifilm	XF1
Fujifilm	X-Pro1
Fujifilm	X-S1
Fujifilm	XE1
Canon	60D
Canon	EOS M
Canon	100D
Canon	G1X
Canon	SX50HS
Canon	EOS 1D Mark IV
Canon	EOS 5D Mark III
Canon	EOS 6D
Canon	EOS Kiss X2
Canon	EOS Kiss X3
Canon	EOS Kiss X4
Canon	EOS Kiss X5
Canon	EOS Kiss X6i
Canon	EOS Kiss X7
Canon	EOS Kiss X7i
Canon	EOS Digital Rebel Xsi
Canon	EOS Digital Rebel T1i
Canon	EOS Digital Rebel T2i
Canon	EOS Digital Rebel T3i
Canon	EOS Digital Rebel T4i
Canon	EOS Digital Rebel SL1
Canon	EOS Digital Rebel T5i
Canon	EOS 600D
Canon	EOS 650D
Canon	EOS 100D
Canon	EOS 700D
Canon	IXY 10S
Canon	IXY 200F
Canon	IXY 210F
Canon	IXY 220F
Canon	IXY 30S
Canon	IXY 31S
Canon	IXY 400F
Canon	IXY 50S

Canon	IXY 51S
Canon	IXY 600F
Canon	IXY Digital
Canon	IXY Digital 200
Canon	PowerShot SD3500 IS
Canon	PowerShot SD1300 IS
Canon	PowerShot ELPH 100 HS
Canon	PowerShot ELPH 110 HS
Canon	PowerShot SD4000 IS
Canon	PowerShot ELPH 500 HS
Canon	PowerShot SD1400 IS
Canon	PowerShot SD4500 IS
Canon	PowerShot ELPH 510HS
Canon	PowerShot ELPH 310HS
Canon	PowerShot S100
Canon	IXUS 210
Canon	IXUS 105
Canon	IXUS 115 HS
Canon	IXUS 125 HS
Canon	IXUS 300 HS
Canon	IXUS 310 HS
Canon	IXUS 130
Canon	IXUS 1000 HS
Canon	IXUS 1100 HS
Canon	IXUS 230 HS
Canon	PowerShot A2400 IS
Canon	PowerShot A2500
Canon	PowerShot A3000 IS
Canon	PowerShot A3400 IS
Canon	PowerShot A4000 IS
Canon	PowerShot A495
Canon	PowerShot D20
Canon	PowerShot G12
Canon	PowerShot G15
Canon	PowerShot G9
Canon	PowerShot S95
Canon	PowerShot SX100 IS
Canon	PowerShot SX150 IS
Canon	PowerShot SX20 IS
Canon	PowerShot SX210 IS
Canon	PowerShot SX230 HS
Canon	PowerShot SX240 HS

Canon	PowerShot SX260 HS
Canon	PowerShot SX40
Canon	PowerShot SX500 IS
Casio	EX-H30
Casio	EX-H5
Casio	EX-S200
Casio	EX-TR100
Casio	EX-TR150
Casio	EX-TR200
Casio	EX-Z2000
Casio	EX-Z350
Casio	EX-Z800
Casio	EX-ZR1000
Casio	EX-ZR200
Pentax	K-01
Pentax	K-30
Pentax	K-5
Pentax	K-5 II
Pentax	K-R
Pentax	Optio VS20
Pentax	Q
Pentax	Q10
Pentax	X-5
Ricoh	CX2
Ricoh	CX5
Ricoh	GXR
LEICA	E82
LEICA	V-Lux 30
Kodak	EasyShare M380
Samsung	ST700
Samsung	PL170
Samsung	PL70
Samsung	PL20
Samsung	ES30
Samsung	ES70
Samsung	ES75
Samsung	WB700
Samsung	SH100
Samsung	PL20

---

---

## Panasonic Models

Brand	Model	Comment
Panasonic	DMC-GF5	
Panasonic	DMC-GX1	
Panasonic	DMC-G2	Note 1
Panasonic	DMC-G5	Note 1
Panasonic	DMC-G5X	Note 1
Panasonic	DMC-FH3	Note 1
Panasonic	DMC-FP1	Note 1
Panasonic	DMC-FP3	Note 1
Panasonic	DMC-S1	Note 1
Panasonic	DMC-TS2	Note 1
Panasonic	DMC-ZS7	Note 1

### Note 1:

Wi-Fi will be disconnected during the camera's continuous shooting mode or video recording mode.  
Please turn off Wi-Fi during the camera's continuous shooting and video recording modes.