

SP Silicon Power

Memory is personal



FREE
Wi-Fi APP

Available on the
App Store

H10 iOS App V2.0

User Manual



1. Spec and System Requirements	3
2. Setting up H10 Device	5
3. iOS App V2.0 Overview	8
4. Regarding File Format	13
5. How to Play and View Your Media Files	14
6. File Transfer based on Local	149
7. File Transfer based on H10.....	21
8. H10 Setup Page	23
9. How to Delete Files Stored in H10	31
10. How to Safely Disconnect H10 from Your Computer	321
11. How to connect H10 with Apple TV.....	32
12. Troubleshooting	33

1. Spec and System Requirements

Capacity: 500GB, 1TB

Dimension: 133 x 86 x 23.5 mm

Weight: 255g +/- 5%

Wi-Fi Interface: IEEE 802.11b/g/n Standard

Build-in 2T2R Antenna, up to 300 Mbs

Build-in USB 3.0 (Compatible with USB 2.0),
up to 5Gb/s Transfer rate (USB 3.0 Mode)

Wi-Fi connection: up to 8 users

Connection range: up to 100 Feet

Power Supply: DC 5V/2A (Power supplied through AC-to-DC adapter)

Battery: Build-in Lithium Battery for up to 5 hours multimedia streaming (1 device)

Operating Temperature: 5°C ~ 45°C

Storage Temperature: -10°C ~ 70°C

Wireless security: WPA+WPA2

Operation system: Support Win 7, Win 8, Win XP, Win Vista, Mac OS X (10.5.X+), iOS 6.0+ iPhones and iPads, Android 2.3+ smart phones and Tablets

Browsers: Support Safari 5 or later version, Webkit (Android), Internet Explorer 8 or later version, Firefox, and Google Chrome

File system: FAT32/NTFS

Supporting file types:

You can store any file in H10, but need your Wi-Fi device to support the file format and resolution you want to play or view.

H10 iOS App: The following file types can be identified. As for playback, it's subject to the Wi-Fi device used to connect with H10.-

Video: m4v, mp4, mov

Photo: JPG, BMP, PNG, GIF

Music: mp3

Document: DOC, XLS, PPT, PDF

For other file types, you can find them in "Folder" Directory and play them if it's supported by your device application.

H10 Web UI:

Play any file supported by your device applications and recommended browsers

2. Setting up H10 Device

This setting up procedure is also provided in User Quick Guide.

If you have already completed the installation process, you may skip this section.

Step 1:



Fig. 1 Connect H10 to your computer by USB 3.0 cable

Plug in USB 3.0 cable into USB port (compatible with USB 2.0 device) to your computer to have faster data transfer in Portable Hard drive mode (PHDD Mode).

Step 2:



Fig. 2 Copy files to H10 from your computer in PHDD mode

In PHDD mode, you can find video/photo/music/document sub-folders under H10

default directory. Copy your video, photo, music, document files into the respective default folders.

Note: You can copy any file to the H10, but the device you use to connect H10 will only play or view the file formats it supports.

There are some software applications to convert video files into different formats. You may want to convert the files into the formats compatible with your device before copying them to H10.

Step 3:

Remove USB cable, and press on the power button on the H10.

Once you power on H10, the system will automatically go into Wi-Fi mode.

After pressing the power button, the data/Wi-Fi access LED will blink in purple for about 1 min. Once the status is ready for use, this LED will turn blue.

Power Button LED indicator:		
	Solid Green:	Full battery
	Blinking Orange:	Half full
	Solid Red:	Low battery, charging is required
	Solid Orange:	Charging

Data/Wi-Fi Access LED indicator:		
Wi-Fi mode (Power on)		
	Blinking Purple:	During setup
	Solid Blue:	Ready for access
	Blinking Blue:	Wi-Fi access
	Solid Red:	System error
PHDD mode (Connected to PC/NB by USB cable)		
	Fast Blinking Blue:	During setup
	Solid Blue:	Ready for access
	Blinking Blue:	Data Access
	LED off:	Hard drive Safety removal

Fig. 3 LED indication table

During the product shipment, the build-in battery of H10 is partially charged to enable H10 access.

When the power button turns red, please charge your H10 with the included USB to DC cable and USB Wall adapter.

In order to use the battery efficiently, it's recommended to activate the battery. For battery activation, you will need to charge the battery from low to full for 3 to 5 cycles. After battery activation, you can have a longer battery hour, but will need to take longer hours (up to 4 hours) to charge the battery from low to full status.

Step 4:



Fig. 4 Connect your Wi-Fi device to H10

For iPhone/iPad

1. Install H10 app (search for “Wi-Fi H10V2” on the app store and install it free of charge.) Keyword: Wi-Fi H10V2
2. On the iPhone/iPad, Select Settings > Wi-Fi and then select and connect H10 from the wireless network list.
3. Tap the H10 app to open the application from iPhone/iPad home screen.

For Android Smartphone/Tablet:

1. Install the H10 app (you can search “Wi-Fi H10V2” on the Google play and install free of charge).
2. On the Android Smartphone/Tablet, Select settings and then enable Wi-Fi
3. Select and connect H10 from the wireless network list
4. Tap the H10 app to open the application from Android smartphone/tablet home screen

For Other Tablets, Smartphones and Computers

1. Enable Wi-Fi
2. Select and connect H10 from your device’s wireless network list.
3. Launch your device’s Web browser and type 192.168.49.73 on URL column. The Web UI (user interface) will pop up for your use.

Safari of iPhone/iPad and Web kit of Android smartphone/tablet are also supported if H10 app is not installed.

3. iOS App V2.0 Overview

H10 apps are available on Apple store and Google Play for free download. For the download and setup instructions, please refer to the section 2, Setting up H10 device.



Fig. 5 iOS App Front-page

There are five functions on the front page of iOS App: H10 Content, Local drive content, Setup, Help, and Photo album. You can tap "H10" icon to operate all contents stored in H10 and tap "Local" icon to operate all contents you transfer to your Wi-Fi device from H10. If you want to change the setting of H10, you can tap "Setup" icon. If you need some help tips, you can tap "Help" icon. You can also tap "Photo album" icon to select the photo stored in the photo album of your iOS devices and then attach the photo to the email or upload the selected photo to H10, Google drive, or Dropbox.

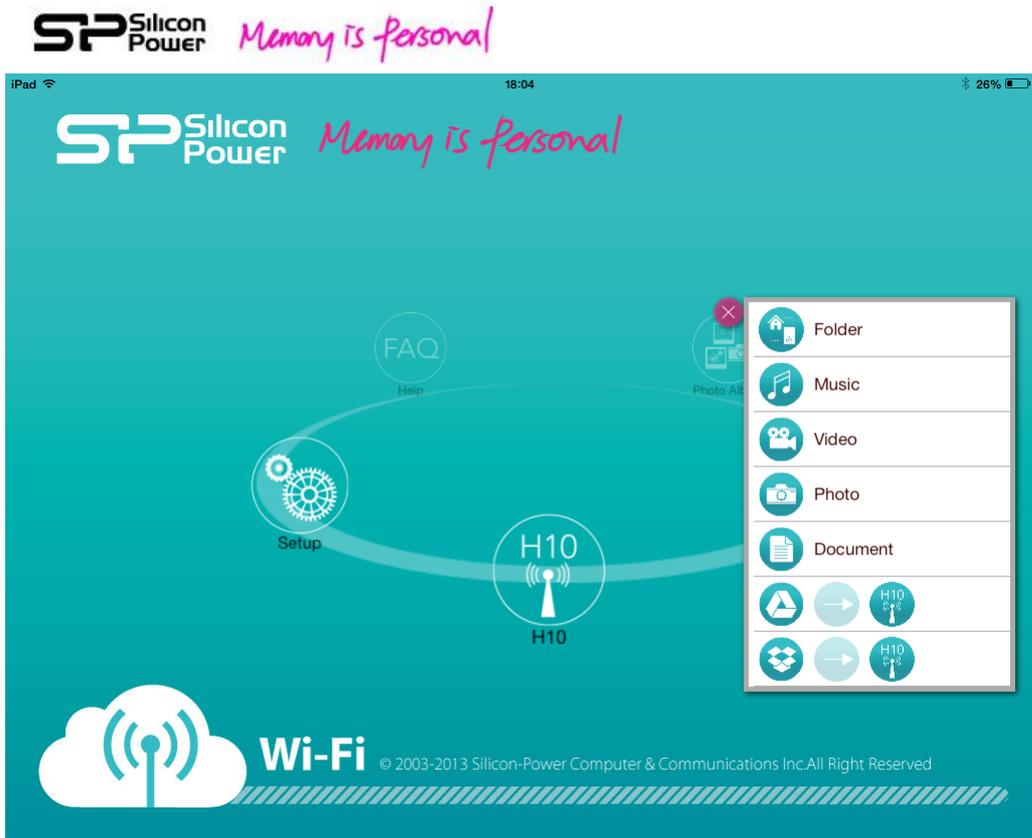


Fig. 6a iOS App Overview_I

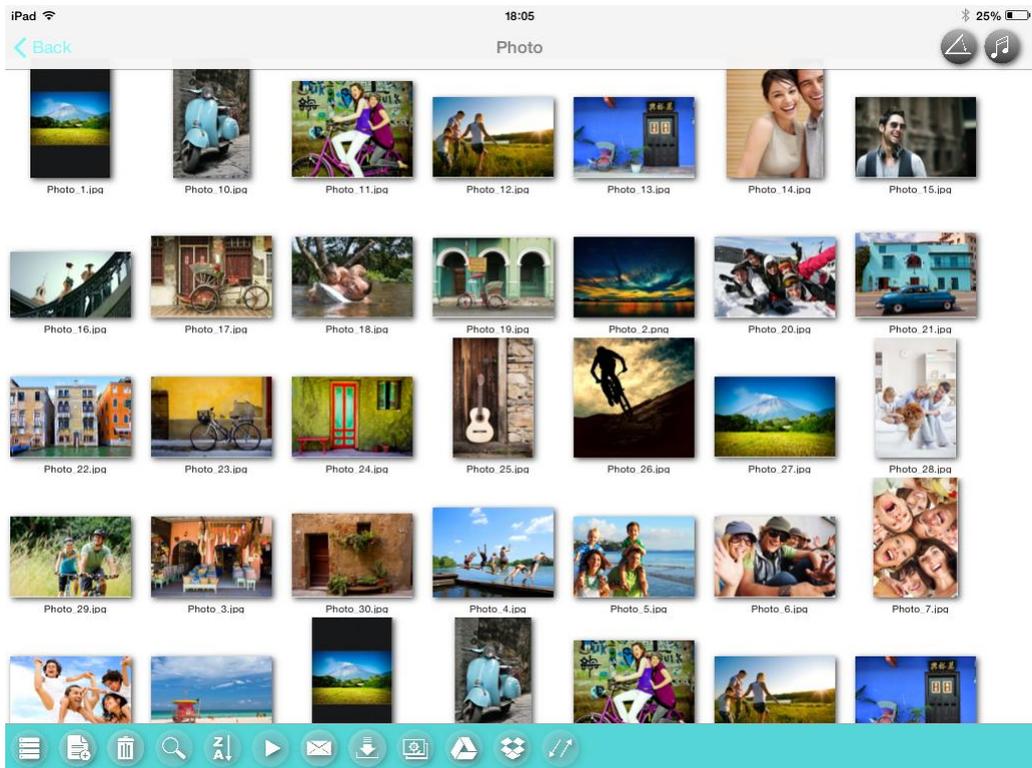


Fig. 6b iOS App Overview_II

**Folder:**


You can view all files stored in H10 in "Folder".

**Video:**

You can tap to view video files you stored in H10.

**Photo:**

You can tap to view photo files you stored in H10.

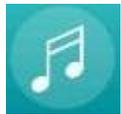**Music:**

You can tap to view music files you stored in H10.

**Document:**

You can tap to view document files you stored in H10.

This version of iOS app will sort the files stored in the whole hard drive. It may take a longer time to display the contents in case of large quantity of files stored in H10.

**Tool:**

Tap to open the tool list on the bottom for further operation.

**Search:**

Input keyword in the search column. H10 will display all files associated with the keyword.

**Sort:**

The files can be sorted by the Alphabet, file type and file size.



Select all:

Tap "Select all" and then all files will be selected.



Deselect all:

Tap "Deselect all", all selections will be cleared.



Delete:

Tap "Delete" icon to delete the files selected.



Download:

After selecting the files, you can tap "download" icon to have a further operation. This function allows you to download your selected files to the local drive folder from H10.



Attach to email:

After selecting the files, you can tap "attach to email" to attach the files to email.



Upload :

In local drive folder of App, you can select the files and then tap "Upload" icon to upload the files to H10.



"Transfer to Google drive":

Allow you to transfer your selected files to Google drive.



"Transfer to drop box":

Allow you to transfer your selected files to drop box.

Note: for Google drive and drop box functions, Internet service is required. You may switch on H10 "Network connection (Outgoing Wireless)" function to connect with

the available network nearby or disconnect H10 first to release your Wi-Fi for Internet service.

**Copy photos to photo album:**

After selecting the photos, you can tap this icon to copy the selected photo to your photo album of iOS devices.

**Folder View:**

View the files presented in a file list and folder structure from your computer.

**Thumbnail view:**

View the files presented in thumbnail size.

**Refresh:**

If you cannot find your updated contents in H10, you can tap refresh icon on the bottom of the screen to refresh the contents.

**Back:**

You can tap “Back” icon on the bottom of the screen to go back to the previous page.

Setup: You can setup H10 device from “Setup” function. Please refer to Section 8 – H10 setup page for the detail operation.

Help: Help page provides some tips for frequently asked questions.

4. Regarding File Format

The H10 hard drive is formatted to FAT32 format, a Windows standard.

FAT32 file system can only support the file size up to 4GB. If you want to play the file bigger than 4GB, you can format H10 into NTFS file system, remove USB cable, power-on H10, and then the default folders will be automatically created. Both of NTFS and FAT32 are supported by H10. But, Mac OS will only be able to read NTFS files. In order to write NTFS files in Mac OS, a 3rd party NTFS driver will be required.

Warning: Do not allow Time Machine® to use H10 for backup. Time Machine will attempt to reformat the hard drive inside H10.

5. How to Play and View Your Media Files

Section 2 has described how to link to H10 Web UI and how to download and launch H10 app. This section further provides instructions for playing videos, music and viewing photos and documents by using the H10 app.

Playing Videos

1. Connect to H10
2. Open the H10 app.
3. Tap “H10” content icon
4. Tap “Video” icon from the pop-up window
5. Tap the video you want to watch.

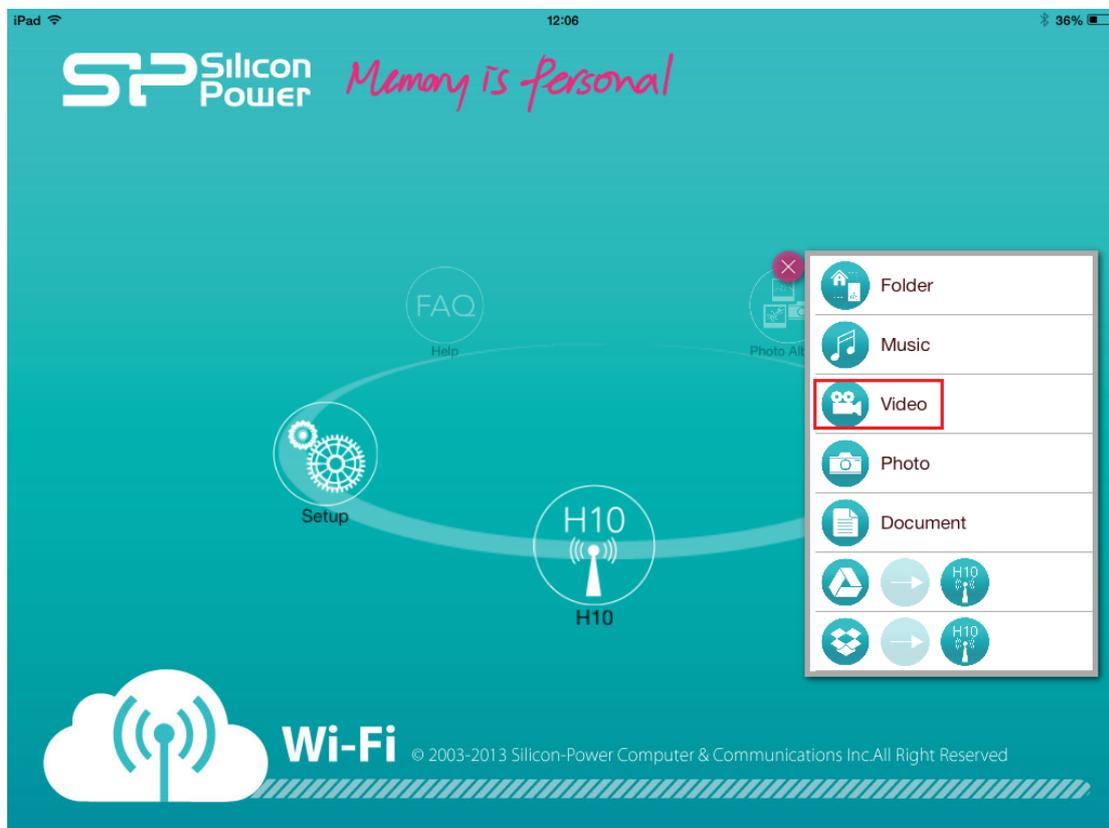


Fig. 7 View and play video content

Note: If a video file you’ve copied to the H10 device cannot be played, it may be related to the file format not being supported by your media player or the device you use to connect to the H10.

To pause a video:

Tap the screen and then tap the pause icon.

To stop playback of a video:

Tap the screen and then tap “Done” button on your smartphone or tablet.

Playing Music

1. Connect to H10
2. Open the H10 app.
3. Tap “H10” content icon
4. Tap “Music” icon from the pop-up window
5. Tap the music file you want to listen to.
6. The play list will pop-up for your further operation. (Referring to Figure 9)

Playing multiple music files

1. Following item 1~3 above
2. Tap “Tool” icon
3. Tap the music files you want to play.
4. Tap the “Play” icon on the bottom of the screen.



5. The play list will pop-up for your further operation. (Referring to Figure 9)

Note: If a music file you’ve copied to the H10 device cannot be played, it may be related to the file format not being supported by your media player or the device you use to connect to the H10.

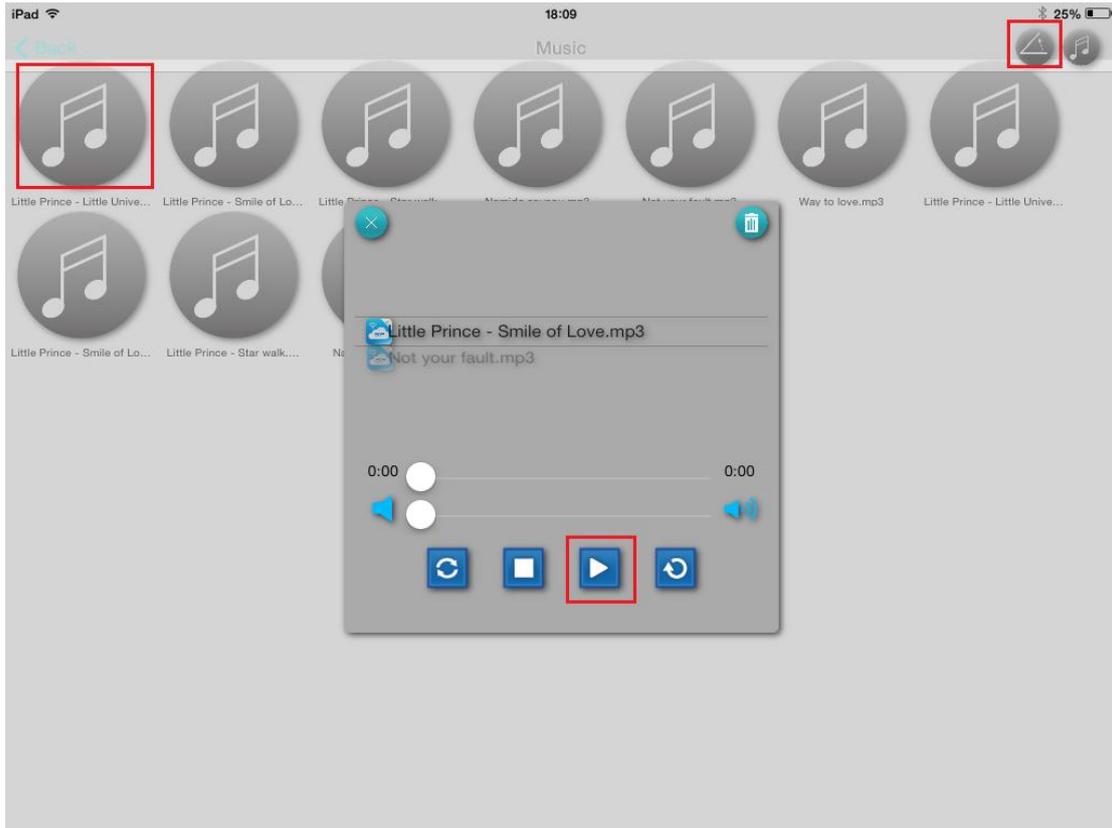


Fig. 9 Music play list



: Tap this icon to repeat the selected music file play



: Tap this icon to repeat all selected music files play in playlist



: Tap this icon to play the music file / Tap again to pause the play



: Tap this icon to stop the play



: Select the files and then tap this icon to clear the selected music files from the pop-up list



: Tap this icon to close the pop-up window

Viewing Photos

1. Connect to H10
2. Open the H10 app.
3. Tap "H10" content icon

4. Tap “Photo” icon from the pop-up window
5. Tap the Photo you want to view and then the photo will be displayed.

Note: If a photo file you’ve copied to the H10 device cannot be displayed, it may be related to the file format not being supported by your media player or the device you use to connect to the H10.

Photo slide show:

Following item 1 ~ 4, you can further tap “Tool” icon and then tap the multiple photos you want to view, and then tap “play” icon to have a photo slide show. If you tap the screen again during the photo slide show, you will be able to further select the different transition effects of the slide show and also decide the interval time in-between each slide. (Referring to Figure 10 and 11)

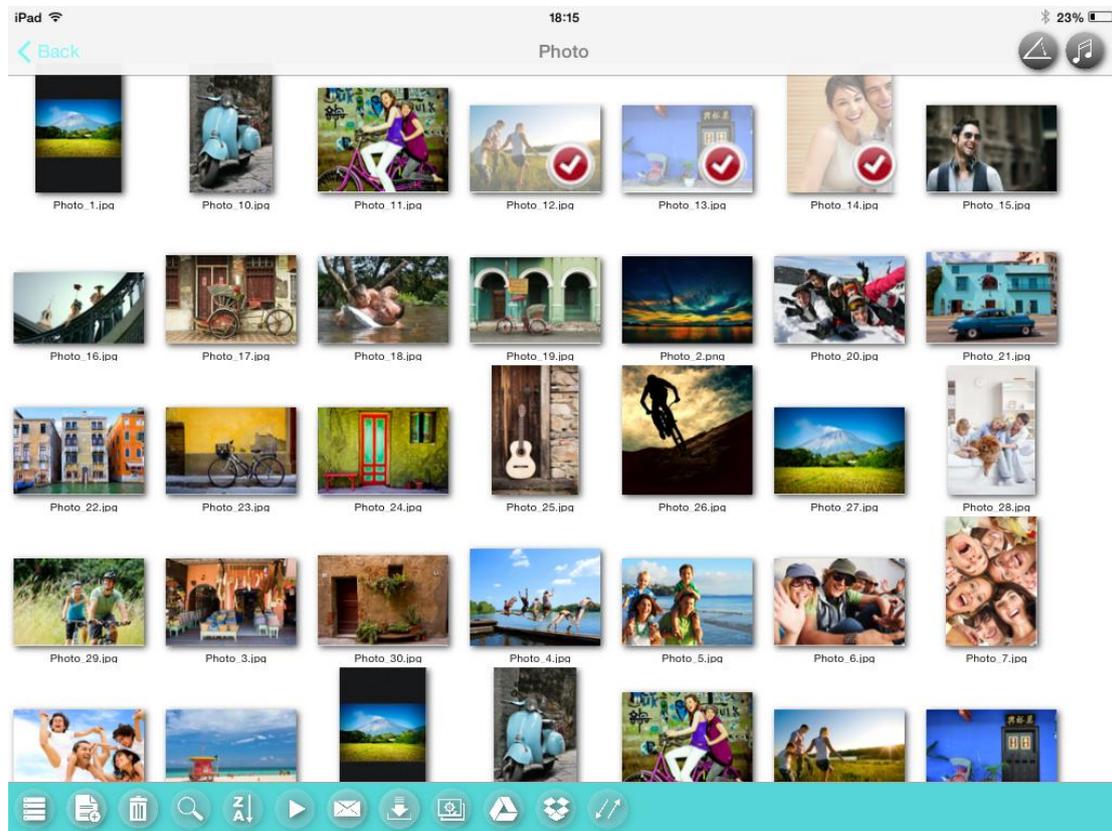


Fig. 10 Photo Slide Show

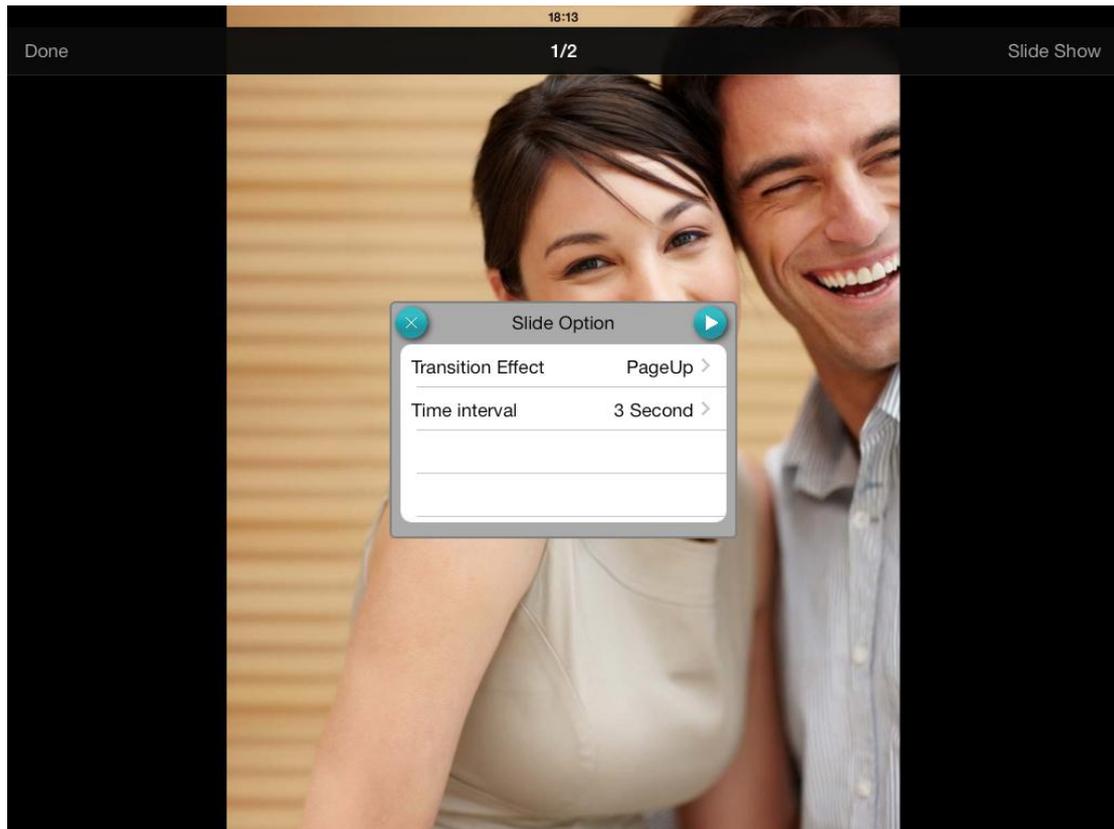


Fig. 11 Transition Effect of Photo Slide Show

To stop playback of a photo slide show:

Tap the screen and then tap the “Done” icon on your smartphone or tablet.

Viewing Documents

1. Connect to H10.
2. Open the H10 app.
3. Tap “H10” content icon
4. Tap “Document” icon from the pop-up window
5. Tap the document you want to view and then the document will open.

Note: If a document file you copied to the H10 device cannot be opened, it may be related to the file format is not supported by the device you use to connect to H10. Please check your device’s specification for its supported document types.

6. Files transfer based on Local

In addition to streaming your content from the H10 device, you can transfer files among H10, Local (your media device), and Google drive/Drop box.

iOS App:

For Google drive/Drop box operation, Internet service is required. You may switch on H10 “Network connection (Outgoing Wireless)” function to connect with the available network nearby or disconnect H10 first to release your Wi-Fi for Internet service.

Before using the following Google drive or Drop box function, please make sure your internet service is available.

“Download to Local from Google drive”:



1. Tap “Local” icon
2. Tap “Download to Local from Google drive” icon
3. After setting up your own Google drive account, you can go for further operation.

“Upload to Google drive from Local”:

1. Tap “Local” icon
2. Select the file type
3. Tap “Tool” icon
4. Tap the files you want to transfer
5. Tap “Google drive” icon on the bottom list
6. After setting up your own Google drive account, you can go for further operation.

“Download to Local from Drop box”:



1. Tap “Local” icon
2. Tap “Download to Local from Drop box” icon
3. After setting up your own Drop box account, you can go for further operation.

“Upload to Drop box from Local”:

1. Tap “Local” icon
2. Select the file type
3. Tap “Tool” icon
4. Tap the files you want to transfer
5. Tap “Drop box” icon on the bottom list
6. After setting up your own Drop box account, you can go for further operation.

“Upload to H10 from Local”:

1. Tap “Local” from the main page
2. Select the file type from the pop-up window
3. Tap “Tool” icon and then tap the files you want to download.
4. Tap “Upload” icon and then select the folder from the pop-up window
5. Tap “Upload” icon from the pop-up window.

7. File Transfer based on H10

In addition to streaming your content from the H10 device, you can transfer files among H10, Local (your media device), and Google drive/Drop box.

iOS App:

For Google drive/Drop box operation, Internet service is required. You can switch on H10 “Network connection (Outgoing Wireless)” function to connect with the available network nearby for Internet service and H10 operation together.

Before using the following Google drive or Drop box function, please make sure your internet service is available.

“Download to H10 from Google drive”:



1. Tap “H10” icon
2. Tap “download to H10 from Google drive” icon
3. After setting up your own Google drive account, you can go for further operation.

“Upload to Google drive from H10”:

1. Tap “H10” icon
2. Select the file type
3. Tap “Tool” icon
4. Tap the files you want to transfer
5. Tap “Google drive” icon on the bottom list
6. After setting up your own Google drive account, you can go for further operation.

“Download to H10 from Drop box”:



1. Tap “H10” icon
2. Tap “Download to H10 from Drop box” icon
3. After setting up your own drop box account, you can go for further operation.

“Upload to Drop box from H10”:

1. Tap “H10” icon
2. Select the file type
3. Tap “Tool” icon
4. Tap the files you want to transfer
5. Tap “Drop box” icon on the bottom list
6. After setting up your own drop box account, you can go for further operation.

“Download to Local from H10”:

1. Tap “H10” from the main page
2. Select the file type from the pop-up window
3. Tap “Tool” icon and then tap the files you want to download.
4. Tap “Download” icon and then the files will be downloaded to Local.

8. H10 Setup Page

H10 comes with default setting. You may want to adjust the setting to your own preferences. For example, setting your password, change the name of H10, upgrade its firmware and more. The setting adjustment can be done through the setup page of H10 Web UI or App.

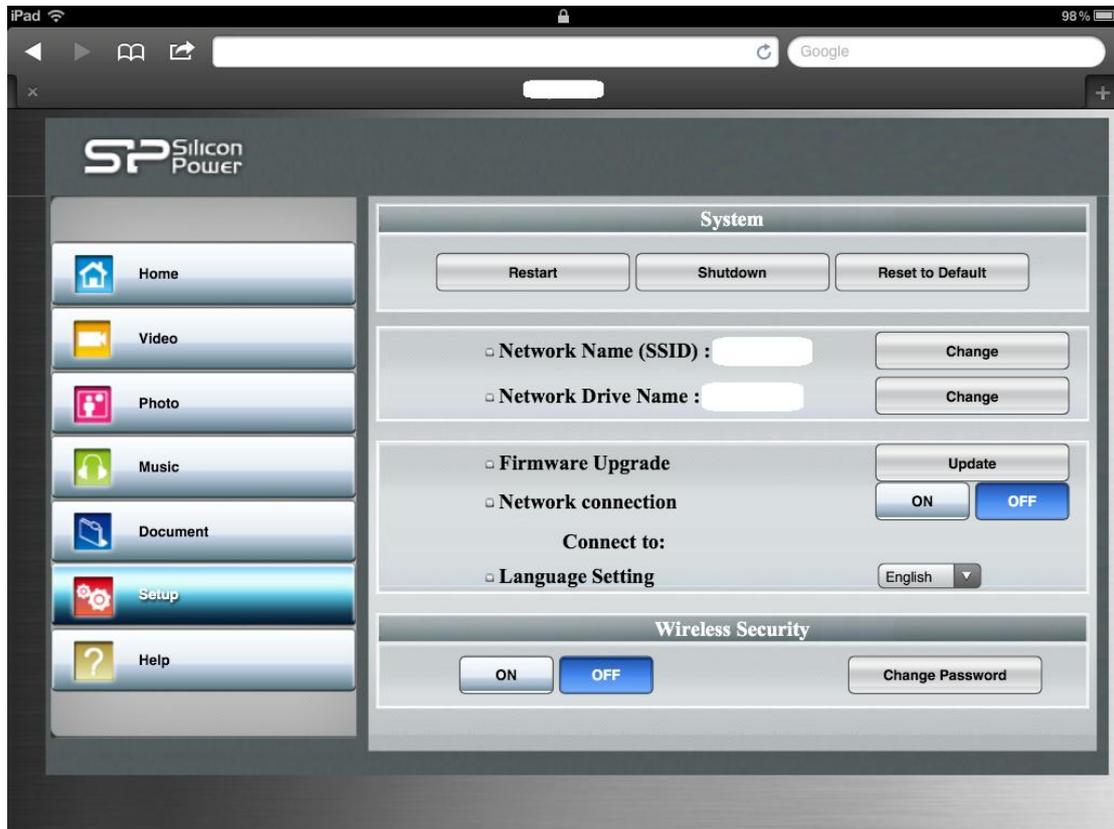


Fig.14 Setup page of Web UI

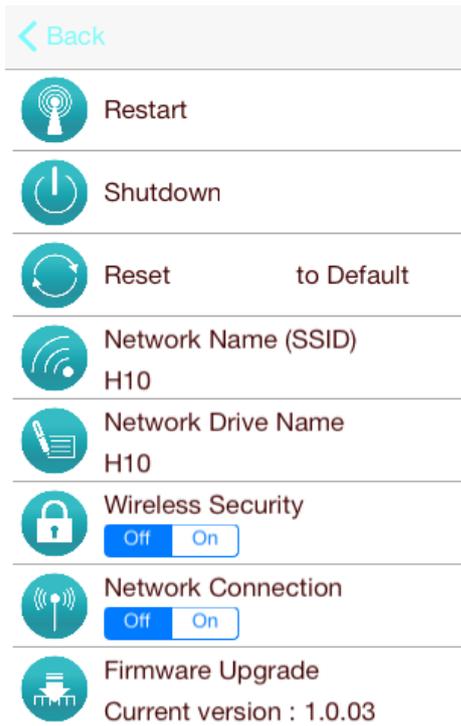


Fig.15 Setup page of App

Restart

If you encounter a minor problem with H10, you can consider to restart H10. When you tap Restart, H10 will take a moment to restart the system. Once the system is ready (Referring to section 2 for LED indication), please re-connect to H10 and open H10 Web UI or App for a further operation. During the restart process, the setting of H10 and all files stored in H10 will remain.

You can also reset the device by pressing the hardware reset pin lightly and releasing it immediately.

Please make sure no one is watching a video, viewing photos, listening to music, or working with any other file stored in H10 before you restart.

Shutdown

To turn off H10, you can press the power button or tap the Shutdown from setup page of H10 Web UI or App. Please make sure no one is watching a video, viewing photos, listening to music, or working with any other file stored in H10 before you shutdown H10.

Reset to Default

If you want to recover H10 setting to its factory default setting, you can tap Reset to Default from the setup page of H10 Web UI or App. You can have the same function

if you press the hardware reset pin for 3 seconds and then release it.

When you tap Reset to Default, H10 will take a moment to reset the system. Once the system is ready (Referring to section 2 for LED indication), please re-connect to H10 and open H10 Web UI or App for a further operation.

For this function, all files stored in H10 will remain, but the setting of H10 will return back to the original factory default setting. You may want to use it if you forget the password or encounter some problem you cannot solve by restart. Please make sure no one is watching a video, viewing photos, listening to music, or working with any other file stored in H10 before you enable Reset to Default.

Change Wireless Network Name (SSID)

H10 is named “Sky Share” or “H10” by default. This is the network name shown in the available network list during your wireless connection. It’s also known as the SSID (Service Set Identifier). You can change it to your preferred name by following these steps:

1. Tap Setup on the main page of App and then tap “Wireless Network name” directly.
2. Type a new name and then tap “Update”
3. Please reconnect to your H10 device after the name has been changed.

Change Network Drive Name

Network Drive (Samba Share) function is available for Windows PC/NB environment. The default setting of Network drive name is Sky Share or H10. If a user has a preferred name, it can be changed.

Please switch to the Setup page of H10 Web UI or App.

1. Tap “Setup” on the main page of App and then tap “Network Drive Name” directly.
2. Type the new name in pop-up window and then tap “Update”.
3. You can keep changing the other setting or exit from the current page.

Firmware Upgrade

If new firmware is available to enhance the H10 functions, it will be available on our website. http://www.silicon-power.com/support/su_dlc.php

Once you download the firmware (skyshare4973.bin), please store it in the root directory of H10 in PHDD mode. After that, please remove USB 3.0 cable and follow the following steps to update the H10 firmware.

1. Please make sure no other user is using H10.
2. Please plug adapter to have a stable power.
3. Press power button to turn on H10.
4. After the system is ready, please connect to H10.
5. Switch to setup page of H10 Web UI. (<http://192.168.49.73>)
6. Click "Update" button of firmware Upgrade
7. The system will re-confirm if you do want to execute firmware upgrade. Please click "OK".
8. Please wait while H10 takes a moment to upgrade the firmware.
9. Once the firmware upgrade is completed, the LED of Wi-Fi/Data access will change to solid blue from blinking blue

Note: It's important to plug adapter to have a stable power while upgrading firmware. In case of sudden power loss, the firmware may be damaged.

Network Connection (Outgoing Wireless)

The H10 device is a wireless network on its own. When your Wi-Fi device is connected to H10, Wi-Fi connection is dedicated for H10. If you want to use your Wi-Fi device to surf on the Internet or check e-mail while connected to H10, you can switch on "Network Connection (Outgoing Wireless)" function from the setup menu to re-connect to your usual network.

1. Network Connection (Outgoing Wireless) ON

Switch to the "setup page" of Web UI or App.

Press "ON" of Network Connection (Outgoing Wireless). Your Wi-Fi enabled device will start to search the available network list nearby. Tap the network you want to connect. In the case there is a "Password" required, please enter the correct password and then press the "OK" button. Please wait a moment. Once it's ready, you will need to reconnect H10 again. Please switch to "Setup page" again for status confirmation. If the connection is successful, the color of the network name you connect to will be turn into black. In case of iOS app, the connected network name will be displayed. (Referring to figure 17 and 18)

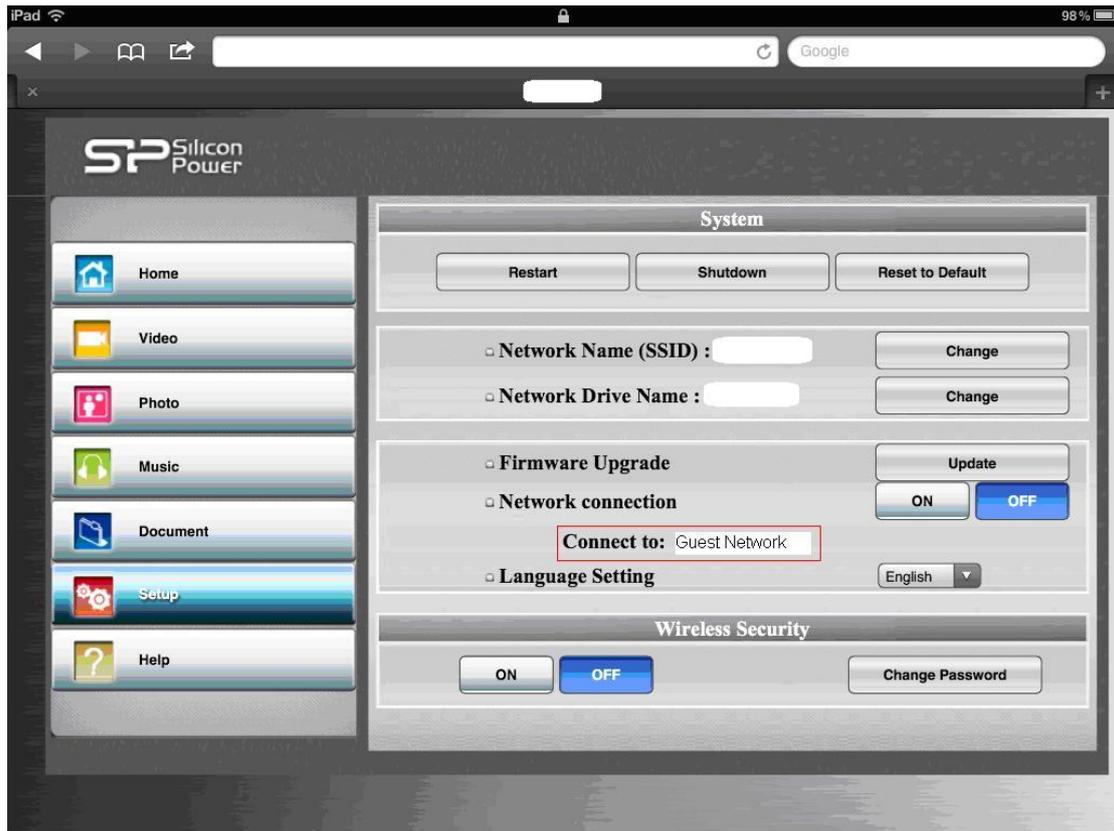


Fig. 17 Web UI - Network connection (Outgoing Wireless)



Fig. 18 App - Network connection (Outgoing Wireless)

2. Network Connection (Outgoing Wireless) Off

If you would like to turn off Network connection (Outgoing Wireless), please go to “setup page” of Web UI or App and then press “OFF” of Network connection (Outgoing wireless).

H10 will disable this function and restart again. After the restart is ready, please reconnect to H10.

Wireless Security (Wireless Password)

H10 provides you with a password function to protect your network access. The default setting, the password function is off. If you want to restrict access to your H10 device, you may want to set a password. Especially, when you are in an environment where you don’t want any unauthorized user to access your H10.

1. Please switch to Setup page of H10 Web UI or App.
2. Tap ON of Wireless Security (Wireless Password). A window will pop-up for a user to input wireless password.

3. Once input is done, please tap OK. H10 will take a while to setup the password. Please wait for a while.
4. Once it's ready, please reconnect to H10 with your password.

To turn off the password function, switch to the setup page of H10 Web UI or App and then tap OFF of Wireless Security (Wireless Password).

Once you tap "OK", H10 will take a while to switch off Password. Please wait a moment. Once it's ready, please reconnect to H10.

To change the password

Please switch to the setup page of H10 Web UI or App.

Web UI:

Tap "Change" of Wireless Security

A window will pop-up for a user to input the new wireless password.

iOS app:

Tap the wording of "Wireless Security" in Setup.

A window will pop-up for a user to input the new wireless password.

Once you click "Update", H10 will take a while to change the password. Please wait a moment.

Once it's ready, please reconnect to H10 with your new password.

The password must be at least eight characters long and no more than 32 characters. Only numbers and alphabet are valid for a password choice.

H10 User Access Management

The H10 is designed to allow up to 8 different devices to connect at once to H10.

(Recommend to limit up to three users for HD Video streaming). If a 9th user is trying to connect, they will be blocked. To allow a blocked device to access H10, one connected user must first disconnect from H10's wireless network.

Either switch off its Wi-Fi function or select any other wireless network other than H10.

9. How to Delete Files Stored in H10

You can delete files in PHDD mode. Once you plug the USB 3.0 cable to your computer, the H10 will function as a normal portable hard drive. You can read, write, and erase files in H10 as you would in a standard portable hard drive.

In addition, H10 app also provides a “delete file” function. Refer to the figure 20. Tap “Tool” icon, select the files you would like to delete, and then tap “Delete” icon.

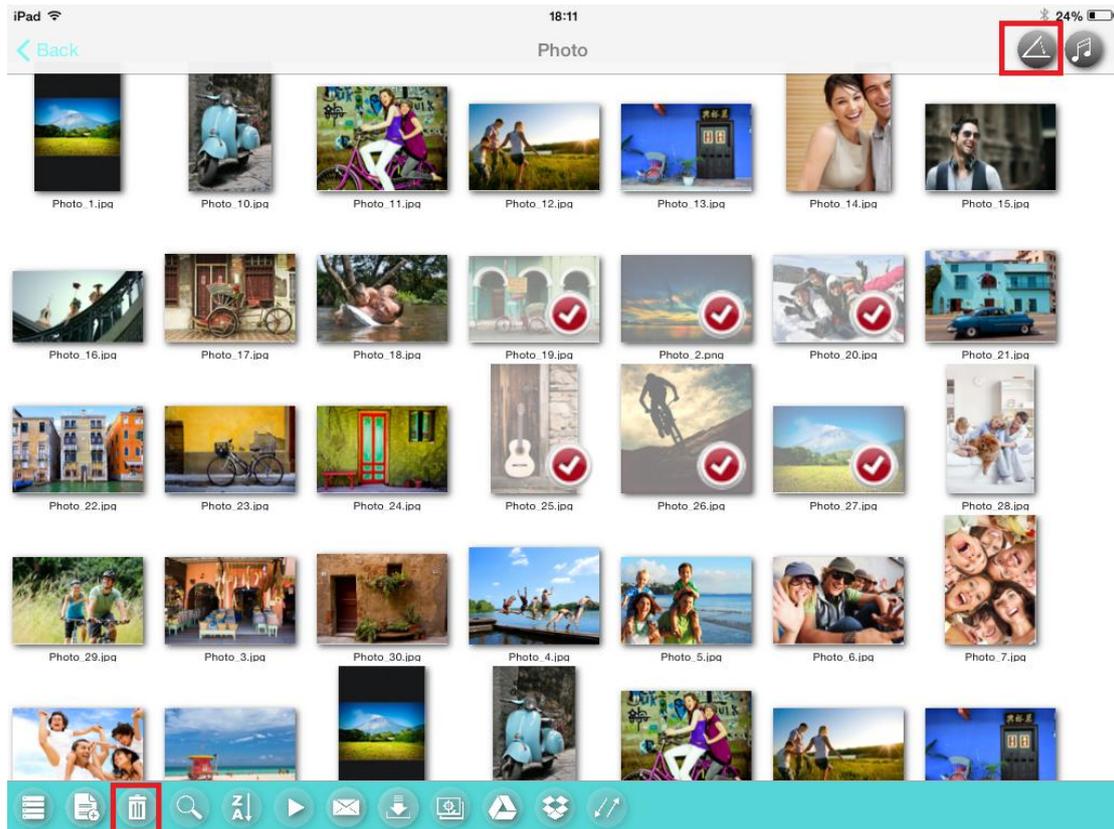


Fig.20 Deleting files (App)

10. How to Safely Disconnect H10 from Your Computer

It's highly recommended to safely remove H10 in order to avoid missing data or file damage.

1. Make sure that no files in H10 are still in use or transfer.
2. To safely eject the H10 from your computer:
 - For Mac OS, drag the H10 drive icon from the desktop to the trash.
 - For Windows, click the Safely Remove Hardware icon.
3. Wait for the data access LED off and then remove H10 from your computer.

11. How to connect H10 with Apple TV

H10 can be connected with Apple TV for a big screen display. Please follow the steps below for setup.

1. Power on H10
2. Power on your Apple TV
3. Go to "Setup" of Apple TV and then turn on "Airplay"
4. Go to "Setup" of Apple TV, select "General", and then select "Network"
Connecting H10 from the available network list
5. Enable "Wi-Fi" of your iPhone or iPad and then connecting H10 from the available network list
6. Tap H10 App and select the video file to play
7. When you tap "Airplay" icon from the video screen, the video screen will be displayed to the TV screen connected with your Apple TV.

12. Troubleshooting

- **Can I change default IP address (192.168.49.73)?**

No, the default static IP address cannot be changed.

- **I cannot use the Internet after I connect to H10. What happened?**

The H10 device is a wireless network on its own. When your Wi-Fi device is connected to H10, Wi-Fi connection is dedicated to H10 wireless. If you want to use your Wi-Fi device to surf on the Internet or check e-mail while connecting H10, you can switch on “Network Connection” function from the setup menu to re-connect to your usual network.

- **I cannot play some of my songs, videos, and files.**

Please make sure the device you use to connect H10 can support your file formats. You can copy any file to the H10, but the device you use to connect H10 will only play or view the file formats it supports.

There are some software applications to convert video files into different formats. You may want to convert the files into the formats compatible with your device before copying them to H10.

- **I reformatted H10 for my Mac by mistake.**

If you reformatted H10 by mistake, please return H10 back to FAT32 format. After power on under FAT32 format, the system will re-build the default folders and initial status.

- **I cannot play the file bigger than 4GB.**

The default format of H10 is FAT32. FAT32 file system can only support the file size up to 4GB. If you want to play the file bigger than 4GB, you can format H10 into NTFS file system, remove USB cable, power-on H10, and then the default folders will be automatically created. Both of NTFS and FAT32 are supported by H10. But, Mac OS will only be able to read NTFS files. In order to write NTFS files in Mac OS, a 3rd party NTFS driver will be required.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Safety Guidelines

Please read the safety guidelines below carefully before using the Product. Incorrect use of your device may cause undesired operation, reduced battery performance, or damage of your device.

1. Do not drop the product. Dropping may cause product damage.
2. Extreme shock and vibration may cause damage to the product such as data corruption etc.....
3. Do not attempt to open or disassemble this product.
4. Store and operate between 5~45°C
5. Recharge the battery every 3 months when not in use.
6. Do not place this product near a heat source or flame or in a high temperature environment.
7. Do not allow this product to have contact with liquid(s).
8. When scrapping this product, the battery needs to be disposed of properly.